



**I : Inspection \*I : Audible check L : Lubrication R : Replace or change**

Items	Months	Service Intervals (Odometer reading or months, whichever occurs first)															
		12	24	36	48	60	72	84	96	108	120	132	144	156	168		
		Odometer Reading		15	30	45	60	75	90	105	120	135	150	165	180	195	210
<b>OPERATIONS INSIDE THE VEHICLE</b>																	
Check brake pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Replace air purifier filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	<b>R : More frequently</b>														
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																	
Check wheel alignment			I		I		I		I		I		I		I		
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check front and rear wheel bearings for play					I						I				I		
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check brake pads and discs for wear		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe usage	<b>I : Every 7,500km or every 6 months</b>														
Check brake shoe linings and drums (drum in disc) for wear		Normal usage		I		I		I		I		I		I		I	
		Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I		
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																	
Check automatic transmission for fluid leakage (In case of leakage, check fluid level) Change automatic transmission fluid		Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
		Severe usage	<b>R : Every 90,000km</b>														
Change engine oil (Refer owners manual for oil type)		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	<b>R : Every 7,500km</b>														
Replace engine oil filter		Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	
		Severe usage	<b>R : Every 7,500km</b>														
Check engine idle speed		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Check exhaust gas recirculation (EGR) system		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
<b>OTHERS</b>																	
Check body condition for damage		<b>I : Every year</b>															
Check the common rail engine (small injection quantity learning)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	

**NOTE:**

\*1 : If excessive valve noise is evident, check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or rental car.
- (8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.