

I : Inspection L : Lubrication R : Replace or change ● : Applicable None : Not applicable

Items	Service Intervals (Odometer reading or months, whichever occurs first)														
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168
	Odometer Reading × 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210
OPERATIONS INSIDE THE VEHICLE															
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : More frequently													
OPERATIONS OUTSIDE THE VEHICLE															
Check wheel alignment (Visual inspection for tyre wear)			I		I		I		I		I		I		I
Check front and rear wheel bearings for play					I				I					I	
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I : Every 7,500km or every 6 months													
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I
OPERATIONS AFTER ENGINE IS WARMED UP															
Check Automatic or CVT transmission level		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission fluid CVT	Normal usage	R : Every 90,000km													
	Severe usage	R : Every 45,000km													
Replace engine oil (Refer to owners manual for oil specifications)	Normal usage	R : Every 15,000km or every 12 months													
	Severe usage	R : Every 7,500km													
Replace engine oil filter	Normal usage	R : Every 15,000km or every 12 months													
	Severe usage	R : Every 7,500km													
Check engine idling speed		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check CO concentration (petrol-powered vehicles)		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check exhaust gas recirculation (EGR) system		I	I	I	I	I	I	I	I	I	I	I	I	I	I
OTHERS															
Check body condition for damage		I : Every year													
Check common rail engine (Small injection quality learning - Diesel)		I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I

NOTE:

*1 : If found any noise from the valve any time, please check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.
- (7) Use as a taxi or as a rent-a-car.
- (8) More than 50% of operation time in heavy city traffic in hot temperatures of 32°C or higher.
- (9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.
- (10) Operation under excessive load.